


# SERIES 5 PIN LAYOUT & WIRING DIAGRAM

1300 779 762  
www.trakngo.com.au

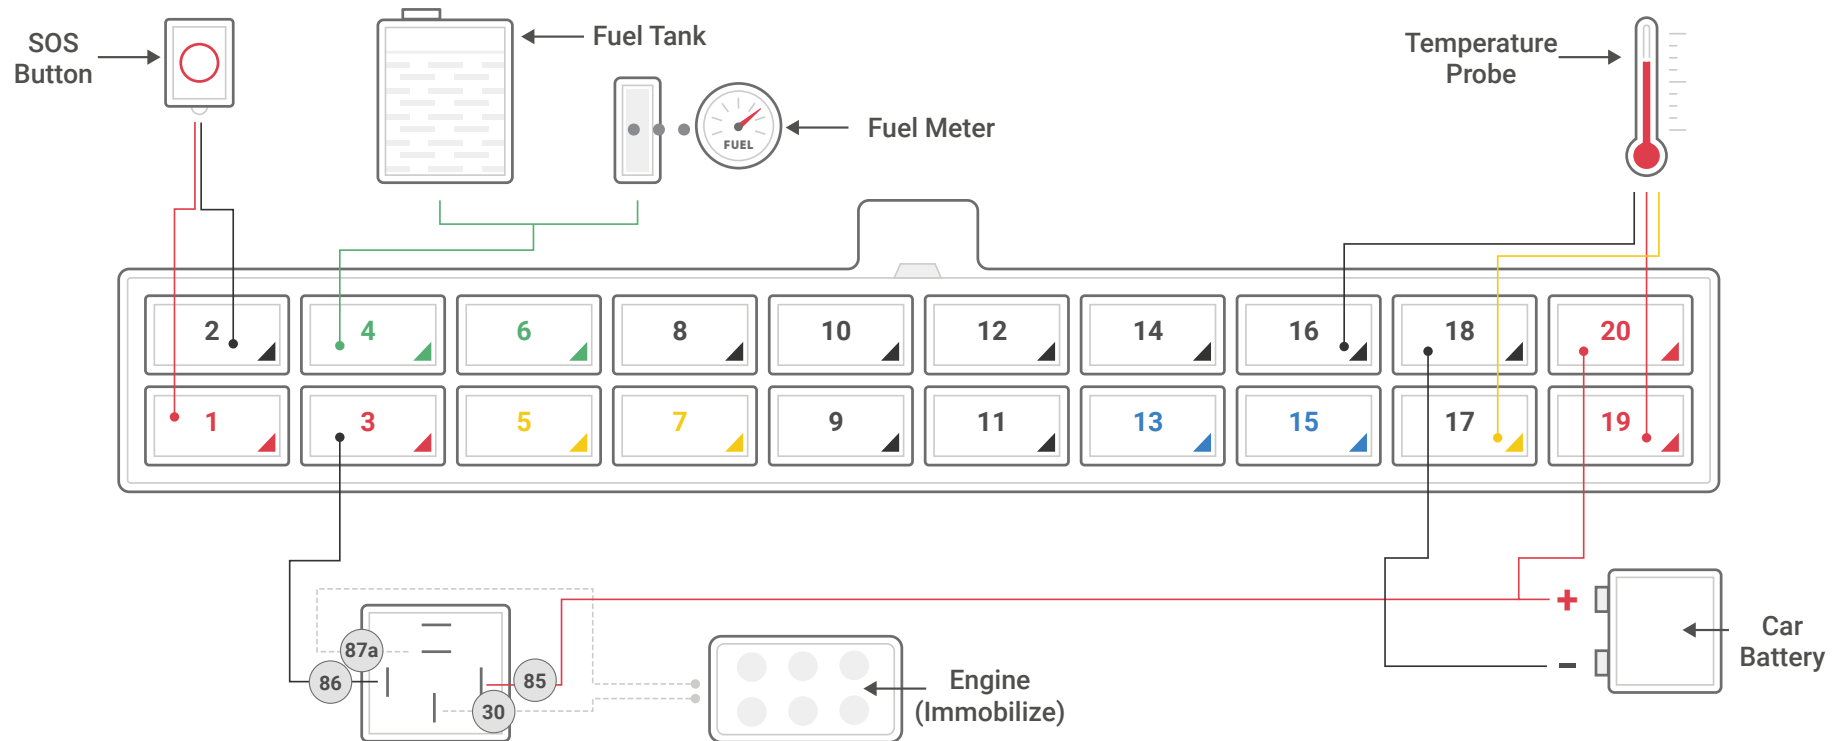

GND	Analog Input 1 (ADB input)	Analog Input 2 (ADB input)	GND	DATA RX	GND	GND	GND	GND	V+ 12v-24v
SOS Button (with GND)	Engine Immobilize (negative)	Door Lock (negative)	Door Unlock (negative)	DATA TX	Door Status (negative)	Digital Input 2 (negative)	Detect Ignition (positive)	Temp. Probe	VCC 5v

⚠ Please ensure tracker is wired to constant power to ensure tracker operates while the vehicle is off.

⚠ GPS Antenna should ideally have direct line of sight for a reliable signal and be shielded away from objects of interference, e.g. electric motors or metal objects.